

FableKids

love inspired.



Tricycle

NOEMI



Thank you for choosing Fable Kids.

Please read the instructions carefully before use and keep for future reference.

Table of Contents

<u>1. Product Overview</u>	1
<u>2. Important Safety Information</u>	3
<u>3. Product Assembly</u>	4
<u>4. How to Use the Product</u>	7
<u>5. Maintenance and Care</u>	9
<u>6. Environmentally friendly disposal</u>	10
<u>7. EC-Declaration of conformity</u>	11



Thank you for purchasing our product. Please read the operating instructions carefully before using the product for the first time. If you give the product to a third party, this manual must be handed over with it. Keep the instruction manual for future reference. The drawings in this manual may not match the physical objects. Please refer to the physical objects.

1. Product Overview



1. Product Overview



1. front wheel

2. frame

3. seat

4. upper push rod

5. canopy

6. rear wheel

7. handle bar

8. bottle holder

9. handrail

10. seat base

11. front basket

12. rear basket

13. footrest

14. lower push rod

15. Storage pouch

2. Important Safety Information



WARNING

Users and guardians are advised to read the instruction manual carefully before use and to keep it for future reference, as it may affect the safety of the child if fail to use in accordance with the instructions.

- The maximum load capacity is 25 kgs.
- The applicable age is 18-60 months.
- The tricycle is intended for one child only.
- Ensure fixing elements have been properly attached and all locking mechanisms are engaged before riding.
- Overloading or incorrect use or use of incorrect spare parts may cause damage to the tricycle or make it unsafe.
- The Tricycle must be kept away from fire and sources of heat.
- Do not leave your child unattended while riding.
- Do not let your child stand up when being in the tricycle.
- The child must always be secured with belts.
- The product is intended for one child only.
- Please use spare parts supplied by the manufacturer only.
- The accessories not approved by the manufacturer should not be used.
- All tricycle components must be checked regularly to make sure they are operational.
- Do not hang or put any heavy items on the tricycle frame as it may cause it to fall down and injure the child.
- When putting the child in or taking it out, the brake must be locked.
- To avoid injuries, make sure your child is away when you assemble or disassemble the product.
- A failure to follow the procedures included in this manual may lead to serious bodily injuries.
- Stop using immediately if it is damaged or unstable.
- All tricycle components must be checked regularly to make sure they are operational.
- This product is not intended for running or roller-skating.
- The product should be used on a straight road away from traffic.
- Be careful when using the tricycle. The child should be trained to use the tricycle and have skills to effectively avoid falling, collision and injury to the child or other people.

3. Product Assembly



Fig.1 Assemble rear wheels (6) onto each side of the axle of rear frame (2).

If you can hear a „click“, it means they have been fixed properly. **Make sure the wheels are secured properly - test your installation by pulling the wheels a few times before using.**

Fig.2 Slide the assembly front wheel (1) into the front of the frame (2)

Fig.3 install the front handlebar (7) on the protruding stem until a locking “click” is heard

Fig.4 Fix the front basket to the front frame.

Fig.5-6 Place 2in1 rear basket (12) on the rear frame and tighten with provided screw.

3. How to Assemble the Product



Fig.7 Place the seat base (10) on the frame, and release the fitting screw on the seat unit (3).

Fig.8-9 Join the seat unit through the base(10) and then tighten seat fitting screw.

Fig.10-11 Insert left/right handrails (9) on both sides of designated slot, put on the front pad and then lock the handrail.

Fig.12 Install the footrest by pushing the part in the slot. To remove, simply press down.

The footrest can be used **upwards** for more comfortable user experience. Simple turn the plastic slot upwards then push in the footrest as shown Fig12.1.



Fig.12.1

3. How to Assemble the Product



Fig.13 Connect the upper push rod with lower push rod as per operation shown.

Fig.14 Insert the assembled complete rod into the steering rod. Secure by locking the red button.

Fig 15 Attach the canopy on both sides of backrest. In order to adjust the inclination of the sunshade, pull evenly the brackets outwards and set the inclination angle.(P15)

Fig 16 Attach bottle holder on push bar.

Fig.17 To attach the rear pouch (15) to the push rod by simply locking the button around the push rod handle.



Fig.17

4. How to Use the Product

Handle height adjustment

Adjust the height of the parent's handle by pressing the button on its parent rod and moving the handle in the desired direction.

Locking the rear wheels

To apply the brake simply push down.
To remove the brake function lift upwards.
Both brakes work independently of each other.




How to lock pedals - free wheel function

The three-wheeled bike has a free wheel function.

When using this function, the child can pedal regardless of the speed of the bike.

To set this configuration, switch the lever on the side of the wheel. If you want the movement of pedals to lead to movement of wheel, switch this lever again.

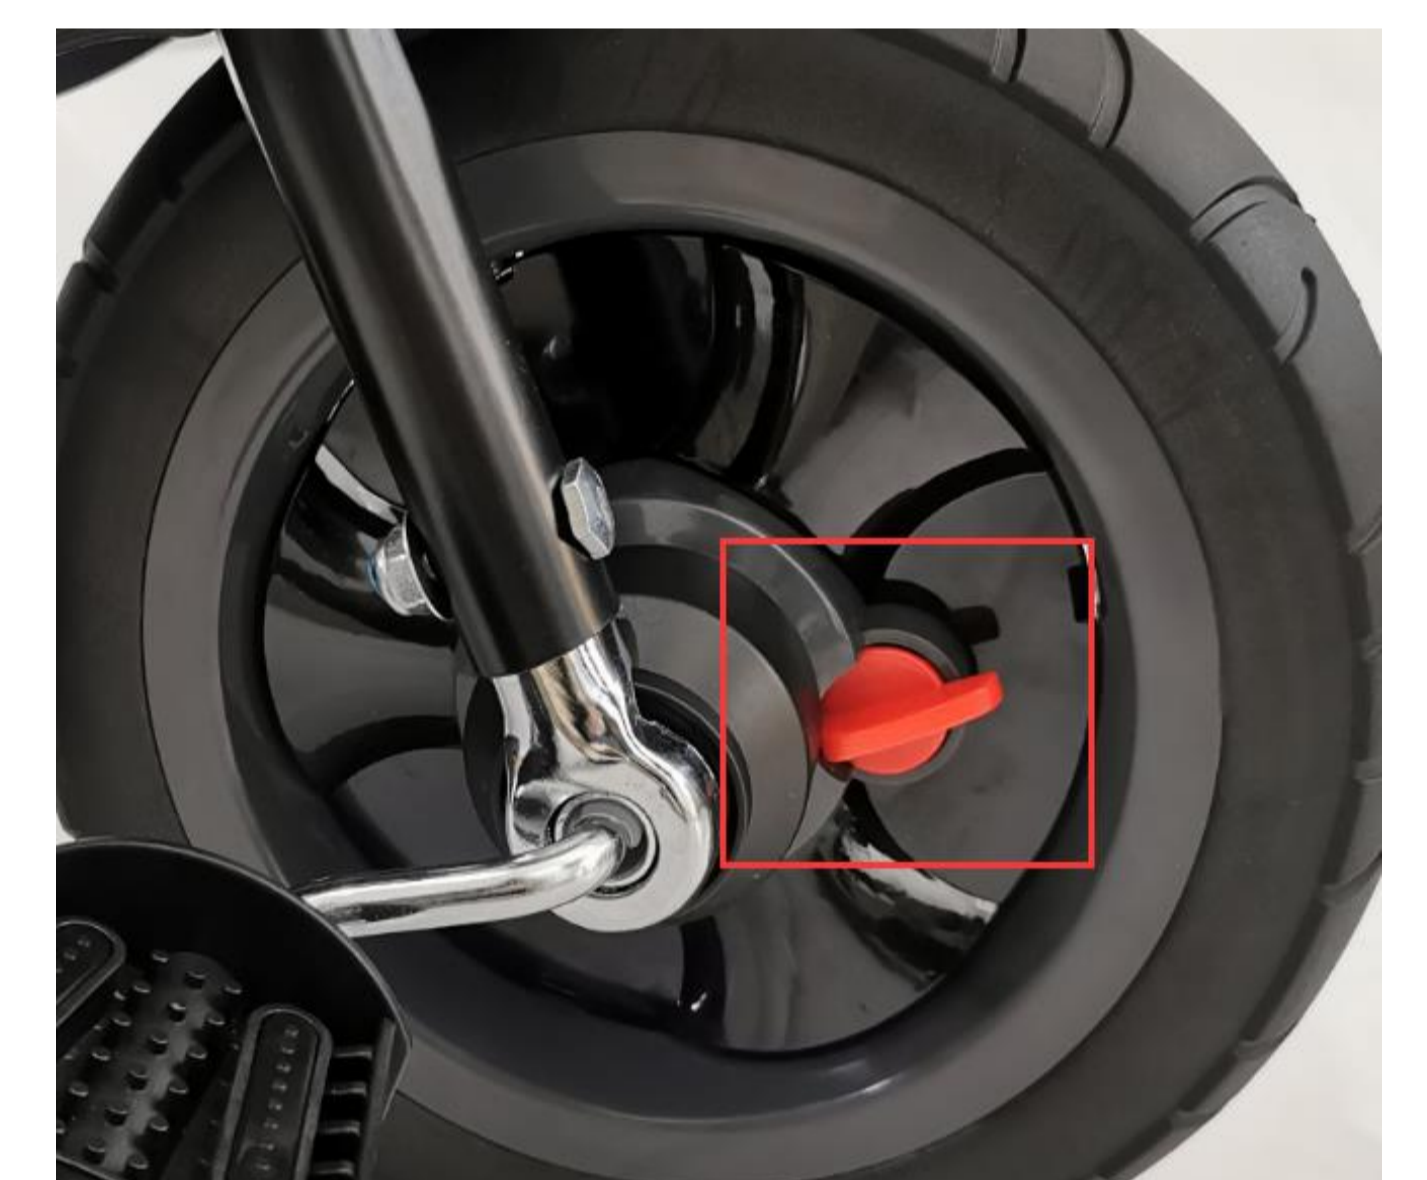

If your child uses a tricycle alone, make sure that the freewheel function is disabled

Reverse the seating unit

Loosen the fixing screw under the seat base and rotate the seat to the desired angle. Tighten the screw to complete the rotation.





4. How to Use the Product

How to disassemble the tricycle

1. Unscrew the seat at the bottom of the frame and remove it from the base.
2. Press the front red knob that secures the handlebar to the frame to release. Disassemble the steering wheel and slide off the front wheel.
3. Unhook the headband of using the button on the side.
4. Disconnect both rear wheels (each has a silver lock button that must be released first).
5. Unlock the parent handle lock (red button at the bottom) and pull it out.
6. Remove the footrest and cup holder.

For transport purposes, lower the tricycle steering wheel by pushing the red button, then fold the seat backrest and secure it with the railing by closing it above the backrest.

5. Maintenance and care

- To keep the tricycle in good condition for a long time, it must be checked from time to time.
- Periodically check the tricycle and make sure that the frame and folding parts are in good condition.
- Periodically, the tricycle must be cleaned with a damp cloth and dried with a dry cloth in order to prevent the formation of rust. Do not use detergents or bleaching agents.
- Do not store the tricycle outside, prolonged exposure to the sun may cause fading and wear of the whole parts of the tricycle.
- When the tricycle is not in use, it must be stored in a dry and shaded place. Before storing, make sure that the tricycle is dry, including the canopy.
- The tricycle must be stored in a safe place out of reach of children.
- Do not place heavy objects on top of the tricycle.
- Do not remove, disassemble or modify any part of the seat folding mechanism or the brakes.
- Do not store the tricycle near a direct source of heat and fire.
- Fabric cover might be machine - washed (max 30°C).
- You can apply oil on tricycle linking elements (e.g. frame, handlebar hinges).

6. Environmentally friendly disposal

Warning Danger of suffocation! Packaging material is dangerous for children. Never let children play with packaging material.

6.1 Disposal and packaging

The packaging of your unit consists of materials that are necessary to guarantee effective protection during transport. These materials are fully recyclable and therefore reduce the environmental impact. Dispose of the packaging in a bin for recyclable materials.

6.2 Disposal of old equipment

Old appliances must be disposed of in accordance with the guidelines and regulations of the local waste disposal authority. Check with your local administration for the address of the nearest recycling center and deliver your appliance there.



The symbol of the crossed-out dustbin on a Waste electrical or electronic equipment indicates that it must not be disposed of with household waste at the end of its life. Collection points for waste electrical and electronic equipment are available free of charge in your area. You can obtain the addresses from your city or local government. You can find out about other return options created by us on our website

www.fable-kids.com

The separate collection of Waste electrical or electronic equipment is intended to enable the reuse, recycling or other forms of recovery of Waste electrical or electronic equipment and to avoid the negative consequences of disposal on the environment and human health.



EU Declaration of Conformity

We

Canbolat Vertriebsgesellschaft mbH
Gneisenaustraße 10-11
97074 Würzburg
Germany

Declare, under our sole responsibility, that the product
Brand:

Fable Kids

Product Name: Kids Tricycle

Model Number: Noemi

EAN: 4252023107174 / 4252023107167 / 4252023107150

to which this declaration relates, is in conformity with the
requirements of the Directives

2017/738/EU

2009/48/EC

The Conformity was checked in accordance with the following
harmonised EN standards

EN 71-1: 2014

EN 71 Part 2: 2011+A1: 2014

Place and date of issue Würzburg, 31.08.2023

Signature:



Korhan Canbolat, Managing Director



FableKids

love inspired.



Office address:
Fablekids
Gneisenaustraße 10-11
D-97074 Würzburg

Return address can be found in the imprint: <https://www.fable-kids.com>

VAT identification number: DE 263752326
Court of the Commercial Register is Würzburg, HRB 10082
WEEE Reg.-No. DE 61617071



Office address: FableKids • Gneisenaustraße 10-11 •
97074 Würzburg



Our customer service number:
Tel. +44 (0) 208 068 5604



E-Mail: info@fable-kids.com



Return address can be found in the imprint: <https://www.fable-kids.com>