

# AREBOS

## Axle stand 3T

AR-HE-UB 3



Please follow all security measures in this user's manual to ensure a secure use.

Thank you for trusting in AREBOS.

# List of contents

<b>1. Safety</b> .....	<b>3</b>
1.1 Safety signs .....	3
1.2 Safety instructions .....	3
<b>2. Product Overview</b> .....	<b>5</b>
<b>3. Technical specifications</b> .....	<b>6</b>
<b>4. Operation</b> .....	<b>6</b>
<b>5. Maintenance</b> .....	<b>7</b>
<b>6. Disposal instruction</b> .....	<b>7</b>
6.1 Disposal of the packaging .....	7
6.2 Disposal of waste equipment .....	7
<b>Imprint</b> .....	<b>8</b>

Please read and save these instructions. Read through this user's manual carefully before using this product. Protect yourself and others by observing all safety information, warnings and cautions. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instructions for future reference.

## 1. Safety

### 1.1 Safety signs



**Warning!** Read the safety instructions carefully. Failure to follow the safety precautions could result in serious injury or damage. Keep the operating instructions in a safe place.



**Warning!** Danger of crushing hands!



**Warning!** Use the article with care


### 1.2 Safety instructions

#### **WARNING!**

- Do not overload axle stands beyond rated capacity.
- Overloading can cause damage to, or failure of, the axle stands.
- Position load on center of crutch/saddle only.
- Always use stands in pairs on hard level surface capable of sustaining the load.
- Do not use on tar macadam.
- Use of stands on other than hard level surfaces can result in load instability and possible loss of load.
- Failure to follow these instructions may result in damage to axle stands, loss of load resulting in property damage, serious personal injury or loss of life.


#### **DANGER!**

- Great care must be taken to ensure you lower the vehicle (or other load) slowly and carefully onto the centers of the crutch/saddle of the axle stands.

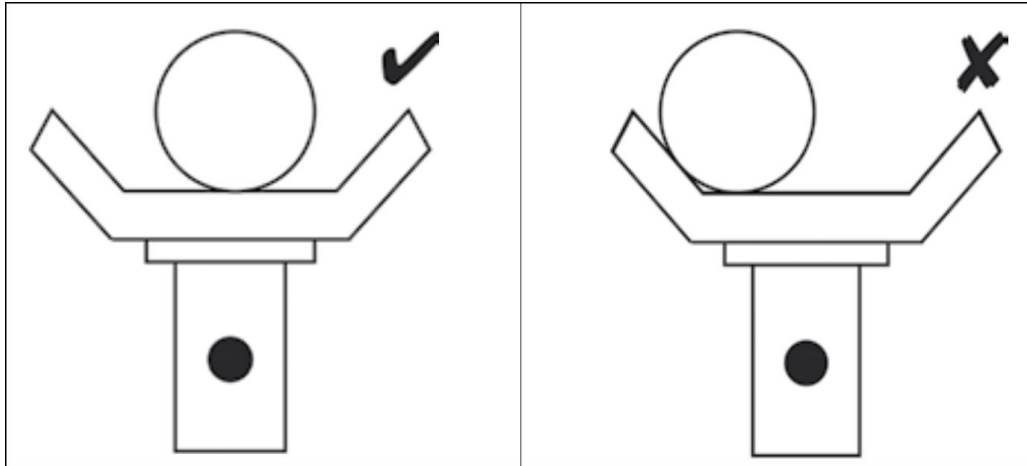

- Use only as specified by the manufacturer.
- No alterations or modifications shall be made to this product.
- Ensure the load does not exceed the maximum capacity as marked on the axle stand, per pair.
- Use no more than a single pair of stands either on the front, rear or one side of the vehicle. Use in pairs.
- Use on a hard, level surface, e.g., concrete. Do not use on uneven ground or tarmacadam.
- Securely chock wheels in contact with the ground. Before jacking and placing the stands, apply vehicle handbrake (put automatics in 'Park').
- Make sure that each stand is securely located under a strong point on the vehicle; consult the vehicle manufacturer's handbook for guidance. Ensure that height adjust locking mechanism is fully located before applying any load to the axle stand.
- Ensure that the load is located centrally on the saddle, and that the weight is directed through the vertical axis of the stand.
- Exercise extra care when using with a three wheeled vehicle or a trailer. Refer to vehicle manufacturer's instructions.
- Once vehicle is supported, ensure that the vehicle and stands are stable before starting work. Ensure that it is not possible for the vehicle to move before commencing any work.
- Before commencing any work or going beneath the vehicle, undertake a risk assessment. Ensure that a responsible person is aware of the work about to be undertaken.
- Inspect stands before each use. DO NOT use if they show signs of damage. DO NOT use if it is suspected that they have been overloaded.
- DO NOT use axle stands on the highway, or anywhere else if it is deemed to be unsafe.
- DO NOT push or twist the vehicle/load whilst it is supported on stands.
- DO NOT mix components between stands. Use only as supplied.
- DO NOT allow children or animals in the vicinity of a vehicle supported on axle stands.
- DO NOT leave a vehicle on axle stands in an area that could be considered a hazard to others or property.

- PLEASE FOLLOW STEPS 1, 2 AND 3 TO CORRECTLY PLACE VEHICLE/LOAD ONTO AXLE STANDS.

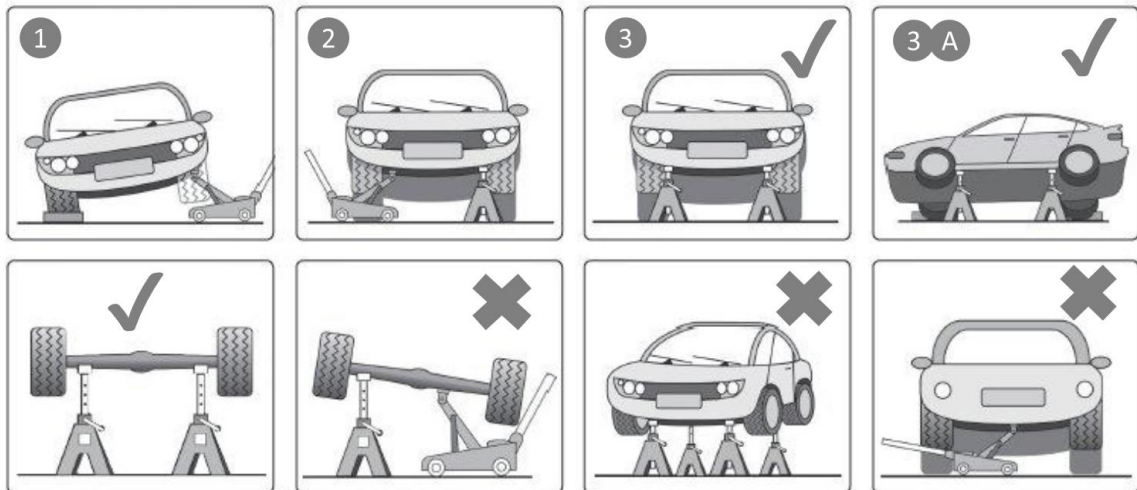

## 2. Product Overview

Explosive View	Part number	Part name
	1	Rubber Pad
	2	Ratchet assembly
	3	Frame assembly
	4	Axle assembly
	5	Chain
	6	Chain Ring
	7	Washer
	8	Screw


### 3. Technical specifications

- Changes are reserved.

<b>Modell</b>	AR-HE-UB3
<b>Capacity</b>	3000 kg
<b>Min. HEIGHT (Without Saddle Pad)</b>	295 mm
<b>Max. HEIGHT (Without Saddle Pad)</b>	438 mm
<b>Min. HEIGHT (With Saddle Pad)</b>	299 mm
<b>Max. HEIGHT (With Saddle Pad)</b>	442 mm
<b>Net Weight</b>	5.62 kg
<b>Dimensions</b>	254mm x 223mm x 295-442mm

### 4. Operation

- Familiarise yourself with the product. Check that the stands are in good condition and that no damage has been sustained during transit. Insert the centre column (A) in the centre tube (B), adjust to height required and insert the locking pin (C).
- Ensure the maximum load does not exceed 3 tons.
- Refer to vehicle manufacturer's instructions for recommended support points. Check that the points are in good condition.
- Ensure the vehicle brake is on (or in park mode) and wheels are chocked.
- Adjust height of stand to correspond with the raised vehicle.
- Check that the locking pin is correctly pushed all the way through the centre column and out of the other side, then position stands under vehicle at points recommended by vehicle manufacturer.
- Carefully and slowly lower the load onto stands. Ensure the load bearing points sit in the center of the stand saddle and check that the stands are stable and not leaning. Also ensure that there are no objects or persons that could impede the safe lowering of the vehicle onto the stands.
- To remove stands jack vehicle slightly so that stand can be removed.
- After use, hold the centre column (B) firmly when removing the locking pin (C). Failure to do so will allow the center column to fall freely through the main center tube which could be dangerous.

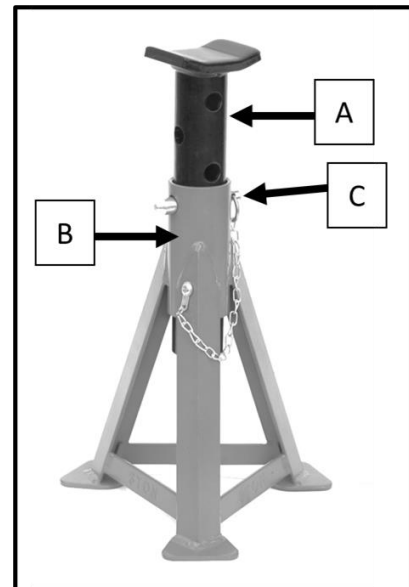

### **WARNING!**

- **Ensure you follow all instructions carefully. Failure to note these warnings may cause damage, serious injury or loss of life.**

## 5. Maintenance

- Check the stands for optical defects such as scratches, cracks, missing or damaged parts. If you find any damage, do not use the jack.

**WARNING! Any stand that appears to be damaged in any way must be removed from service immediately.**

- Immediately replace defective parts by contacting the seller.
- Ensure the locking pins are in good order and condition.
- Due to the potential hazards associated with these stands, do not misuse, or make any modification to the stands or components.
- It is the responsibility of the stands owner to ensure the operator has read these instructions, and that the operator is familiar with the stands use and limitations.

## 6. Disposal instruction

### 6.1 Disposal of the packaging

- Please make reference to the guidelines and standards for appropriate disposal of the packaging valid in your region. In part, the package may consist of plastic bags - watch this respect, with special care to ensure that this is not out of the reach of children. There is a risk of suffocation!

### 6.2 Disposal of waste equipment

- Equipment must be disposed of in accordance with the rules and regulations of the local waste disposal.
- At the end of the long life of your article, please dispose of the valuable raw materials for proper disposal so that proper recycling can take place. If you are not sure how to proceed, the local waste disposal companies or recycling centers are happy to help.

**Our customer service number: +49 (0) 931-45232700**

Canbolat Vertriebs GmbH • Gneisenaustraße 10-11 • 97074 Würzburg

## Imprint

Name of the product: Arebos Axle stand 3t (pair)  
Model Nr.: AR-HE-UB3  
Art. Nr.: 4252023112277

If the product has any modification not allowed by us, this declaration loses its validity.

Date/Manufacturer Signature/Location:

Würzburg, 23/12/2022



Identification of the signatory:  
Korhan Canbolat, head of the company

Authorised representative for the technical documentation:  
Korhan Canbolat

**Office address:**  
Canbolat Vertriebs GmbH  
Gneisenaustraße 10-11  
D-97074 Würzburg

Return address can be found in the imprint: <https://www.arebos.de/impressum/>

VAT identification number: DE 263752326  
Court of the Commercial Register is Würzburg, HRB 10082  
WEEE Reg.-No. DE 61617071