

Original instruction manual - Sina nail cutter

Sina

Nail cutter



Follow all safety precautions in these operating instructions to ensure safe use.



Thank you for your trust in Sina.

Table of contents

1. Safety	3
1.1 Symbol explanation.....	3
1.2 Hints	3
1.3 Electrical hazard	4
2. Specifications	4
3. Description of the device	5
4. Application	5
5. Cleaning and maintenance.....	7
5.1 Cleaning the device	7
5.2 Cleaning of abrasives	7
5.3 Storage	7
6. Disposal instructions	8
6.1 Disposal and packaging	8
6.2 Disposal of old equipment	8
6.3 Meaning of the symbol "garbage can"	8

 
Thank you for purchasing our product. Please read the instruction manual carefully before using the product for the first time. If you give the product to a third party, this instruction manual must be handed over with it.

1. Safety

1.1 Symbol explanation



Warning! Read the safety regulations carefully. Failure to comply with safety precautions may result in serious injury or damage. Keep the instruction manual in a safe place.



Protective insulated housing (protection class II)!

1.2 Hints

- This device is intended for domestic use.
- Use the device only for applications as described in this instruction manual.
- The manufacturer cannot be held liable in any way for personal injury or damage to property resulting from non-compliance with these operating instructions and consequences of improper use of the device.
- This appliance is not intended for use by persons (including children) with limited physical, sensory or mental abilities or with a lack of experience and/or knowledge, unless they are supervised by a person responsible for your safety and have been instructed on how to use the appliance.
- Never leave the device unattended when using it by children or inexperienced people.
- Never let children play with the packaging material. There is a risk of suffocation.
- Make sure that children do not play with the device.
- When using a device in the vicinity of children, scrupulous supervision is necessary.
- Use only manufacturer-approved attachments and accessories.
- Never use the appliance after the power cord has been damaged, the appliance has been dropped, or it has come into contact with water.
- Do not use the appliance under blankets and pillows, as excessive heat may cause fire, injury, or electric shock.
- Do not carry the device by the cable or use the cable as a handle.
- When you exit the application, set all switches to Off/Off/0 and unplug it.
- Only use extension cords if you have first made sure that they are in perfect condition.
- If the device's power cord is damaged, it may only be replaced by an authorized service center.
- Never place or use the device in a wet or humid environment.

- Do not use the device under water, e.g. in the shower.
- Never bring the appliance into direct contact with fire, gas, oxygen or hot objects, such as stovetops.
- Switch off the device before changing the abrasive.
- Take care of the device so that it cannot be dropped or otherwise damaged.
- If there are any problems with the device, repair it immediately. Don't try to fix it yourself.
- Do not lubricate or wash the device.
- Unplug the AC adapter when not in use.

1.3 Electrical hazard

- Before commissioning the device, you must check that the mains voltage indicated on the nameplate is the same as the existing mains voltage.
- Never bring the device into direct contact with water or other liquids.
- The device must not be used outdoors.
- Do not touch the device with wet hands.
- Operate the appliance only with the specified mains voltage.
- Always unplug it from the socket after use and before cleaning.
- If the device has fallen into water, do not reach for it! First, unplug it from the power outlet.
- Do not store the appliance near a sink or bathtub, as there is a risk that it may fall into a sink or bathtub.
- To avoid any risk of injury, blockage or damage to the device, make sure that the running device does not come into contact with clothing, strings, laces, bristles, wires, threads or the like.

2. Specifications

Model	AR-MA-024-G
Torque	20000 Nm
Input voltage	220 V
Output voltage	12 V
Electricity consumption	13.5 W
Class	II
Direction	Return; Heat
Sound Pressure Level LpA	33 db(A)
Weight	1.1 kg

3. Description of the device

- The nail cutter is ideal for taking care of your hands, feet and nails. Replaceable, low-wear sanding attachments ensure perfect care. Please read these instructions carefully before using the product.



Fig 1

1. ON/OFF switch
2. Speed adjustment controller ("+" is speed increase / "-" is speed reduction)
3. Forward/Reverse Switch
4. Indication of speed level
5. Socket for handpiece
6. LED light. Indication that the device is receiving power.
7. Slot for handpiece. The handpiece is integrated. On the back of the device there is an "eject button" for ejecting the handpiece.
8. Bitset/Mandrel
9. Handpiece
10. Slide-in milling head
11. Eject/eject button for ejection of the handpiece.
12. Socket for foot pedal

4. Application

- Start by shortening and shaping the nails. Always file your nails straight to prevent painful ingrowth. With our files, you can avoid this ingrowth.
- To combat calluses, treat the affected areas with the cone attachment. Repeat the procedure regularly, proceeding gently.
- Ingrown nails can be gently loosened with the cutter attachment. Thick, woody nails are slowly sanded down from above and filed thinner on the sides.

- The abrasives are available in various shapes and degrees of hardness and can be reordered at any time.
- Use the eject button (see Fig. 2) to eject the handpiece.
- Plug the connection cable of the handset into the socket of the control unit (5)
- Open the slot milling head (10) on the handpiece (9) by turning the handle.
- Insert the desired bit/mandrell into the milling head insert (10).
- Close the slot milling head (10) by turning it back.
- Plug the power cord into the wall outlet.
- Use the ON/OFF switch (1) on the control unit to switch on the device.
- The desired speed can be set by means of the rotary switch (2). You can see the power level on the display (4).
- The optimum speed depends on the hardness of the nails/tips to be machined and the cutter used.



Fig 2 Eject button for the handpiece



Fig 3 Handpiece

- **IMPORTANT!** To control the desired direction of rotation of the cutter - depending on whether you are working left-handed or right-handed - you can adjust the switch for the direction of rotation accordingly.
Never change the direction of rotation while the manual cutter is in operation. To change the direction of rotation, first reduce the speed to 0. Then change the direction of rotation. Then set the speed control back to the desired speed. As a result, you increase the service life of the device.

5. Cleaning and maintenance

5.1 Cleaning the device

- Regular maintenance and cleaning ensures optimal results and extends the life of the device.
- Store the nail cutter in a safe, cool, and dry place when the device is not in use.
- In order not to compromise the safety, reliability and performance of the device, no extensions, new adjustments, modifications or repairs may be carried out.
- Extensions, new hires, changes or repairs may only be carried out by persons authorised by Canbolat Vertriebs GmbH.
- Before cleaning the appliance, make sure it is turned off and unplugged.
- For cleaning, use a slightly damp and soft cloth.
- Do not use aggressive substances such as scouring milk or other washing-up liquids, as these can attack the surface.
- Do not repair the device. It does not contain any parts that can be serviced by the user.

5.2 Cleaning of abrasives

- The abrasives can be cleaned of dust and skin residues with the help of a brush. It is still recommended to disinfect the abrasives with commercially available disinfectant spray or 90% alcohol (from the pharmacy) to avoid the transmission of infections. Please make sure to keep the pins of the abrasives free of grease and clean them from time to time.

5.3 Storage

Transport and storage temperature	+5°C to +50°C
Operating temperature	+10°C to +40°C
Atmospheric pressure	700-1060 hPa

6. Disposal instructions

6.1 Disposal and packaging

- Please ensure that the packaging is disposed of appropriately in accordance with the guidelines and standards applicable in your region. Some of the packaging may consist of plastic bags - take special care to keep them out of the reach of children. There is a risk of suffocation!

6.2 Disposal of old equipment

- Waste equipment must be disposed of in accordance with the guidelines and regulations of local waste disposal.

6.3 Meaning of the symbol "garbage can"



Protect our environment, electrical appliances do not belong in the household waste. Use the collection points provided for the disposal of electrical appliances and hand in your electrical appliances that you will no longer use. In this way, they help to avoid the potential effects of incorrect disposal on the environment and human health. In this way, you make your contribution to the reuse, recycling and other forms of recovery of waste electrical and electronic equipment. Information on where to dispose of the devices can be obtained from your municipalities or municipal administrations.

Our customer service number: +49 (0) 931-45232700

EU Declaration of Conformity

We, the

Canbolat Vertriebs GmbH, Gneisenaustraße 10-11, 97074 Würzburg, Germany

We hereby declare that the devices referred to below comply with the relevant essential safety and health requirements of the EU directives due to their design and construction as well as in the designs we place on the market.

Product Name: Nail Cutter SKU:
4260199755709

If the device is modified without our consent, this declaration of conformity loses its validity.

Date/Signature Manufacturer/Location: Würzburg, 15.04.2019



Signature:
Dipl.-Inform. (Univ.) Korhan Canbolat, Managing Director

Representative of this instruction manual/technical data:
Dipl.-Inform. (Univ.) Korhan Canbolat, Managing Director

Office Address:
Canbolat Vertriebs GmbH
Gneisenaustraße 10-11
97074 Würzburg

The return address can be found in the imprint: <https://www.arebos.de/impressum/>

Sales tax identification number: DE 263752326
The court of entry in the commercial register is Würzburg, HRB 10082
WEEE-Reg.--No. DE 61617071