

FableKids

love inspired.



Child Car Seat

NALA



ECE R129/03
V.072023

Thank you for choosing Fable Kids.

Please read the instructions carefully before use and keep for future reference.

Table of Contents

1. Product Overview	1
2. Important Safety Information	4
3. How to Use the Product	6
4. Installation	12
5. Care instruction	16
7. Environmentally Friendly Disposal	19



FableKids


love inspired.

Dear Parents,

Thank you for purchasing our product. Please read the operating instructions carefully before using the product for the first time. If you give the product to a third party, this manual must be handed over with it. Keep the instruction manual for future reference. The drawings in this manual may not match the physical objects. Please refer to the physical objects.

1. Product Overview

1.1 Part names

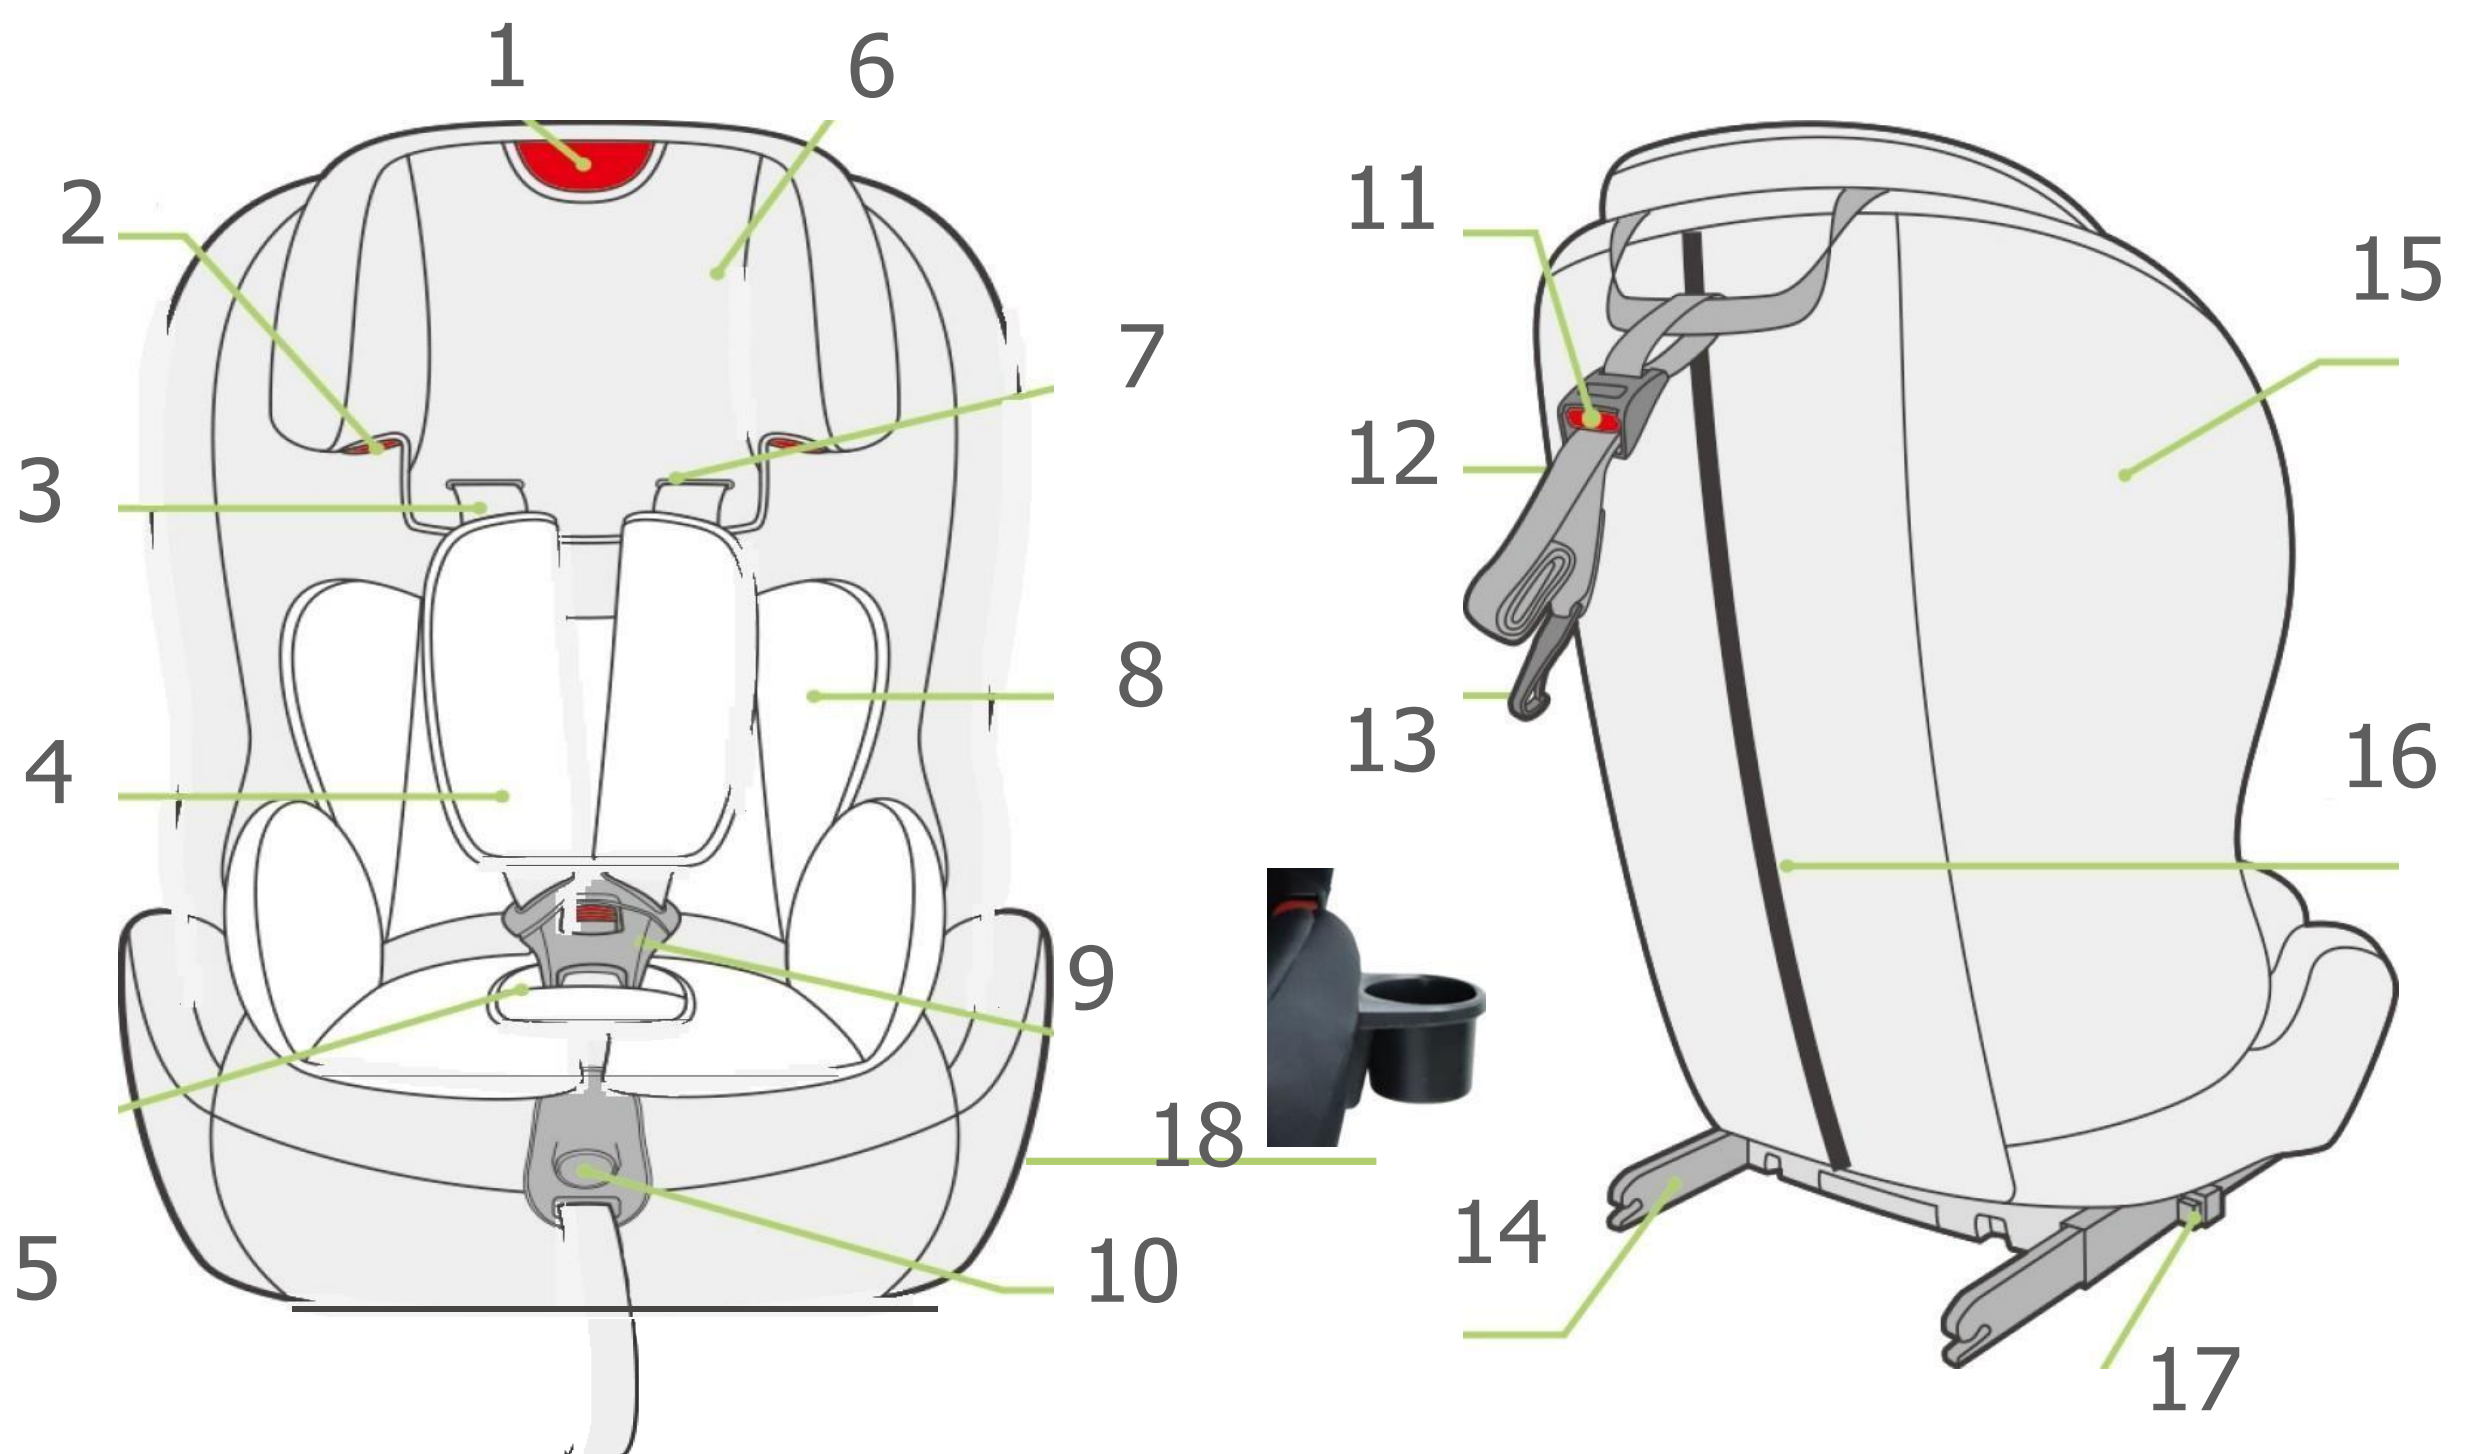

1. Headrest handle
2. Shoulder belt guide
3. Hardness strap
4. Shoulder pads
5. Buckle pads
6. Headrest
7. Hardness slots
8. Baby insert
9. Hardness buckle
10. Adjusting device

11. Top Tether release button
12. Top Tether strap
13. Top tether hook
14. ISOFIX Connector
15. Seat cover
16. Cover Zipper
17. ISOFIX release button
18. Cup holder

1. Product Overview

1.2 Suitable Size Range

The NALA car seat is designed for children from 76 cm to 150 cm in height and can be installed facing forward.

You can use your child car seat as follows:

Size Range	Installation		Category	Class	Child restraint mode
76-105cm	Forward facing	ISOFIX+Top-tether	i-Size	Integral	Harness belt
100-150cm	Forward facing	Adult three point safety belt	i-size booster seat	Non-integral	Adult three-point safety belt

- **"i-Size":**

In the range from 76 cm to 105 cm, the car seat is installed using the ISOFIX connectors and the Top Tether strap. In this range, the child is held in the car seat by the safety harness. **The maximum occupant mass is 24KG.**

- **"i-size booster seat" :**

In the range from 100 cm to 150 cm, the car seat is installed using a three-point car seat belt. In this range, the child is held in the car seat by a three-point car seat belt.

This kind of restraint device can be used on condition that it has passed the EU R16 regulations or other equivalent standards certification which can prove that the motor vehicle is equipped with three-point static belt adjuster which meets the requirements.



1. Product Overview

The car seat can be installed in the car in the places indicated by the manufacturer in the vehicle manual. It is required to read the vehicle manufacturer's operating instructions.

NOTICE FOR CHILD SIZE RANGE 76-105CM:

- This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No 129, for use in, i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle users' manual.
- **IMPORTANT – DO NOT USE BEFORE THE CHILD'S AGE EXCEEDS 15 MONTHS (Refer to instruction).**
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

NOTICE FOR CHILD SIZE RANGE 100-150CM:

- This is a i-Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No 129, for use primarily in " i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

2. Important Safety Information



WARNING

- This is an "i-Size Enhanced Child Restraint System", please also refer to the vehicle manufacturer's handbook for detail use requirements.
- Read this instruction manual carefully.
- The car seat has been designed, tested and approved for use in accordance with the requirements of ECE Regulation No. 129 concerning the approval of child improved restraint systems (ECE R129/03)
- This car seat is designed for children from 76 cm to 150 cm in height and can be installed facing forward. In the range from 76 cm to 105 cm, the car seat is installed using the ISOFIX connectors and the Top Tether strap. In this range, the child is held in the car seat by the safety harness. In the range from 100 cm to 150 cm, the car seat is installed using a three-point car seat belt. In this range, the child is held in the car seat by a three-point car seat belt.
- The correct fitting of the 3-point belt or the ISOFIX anchoring systems is of vital importance for the safety of your child.
- For the future use of the seat, you must keep the instruction manual. There is a pocket on the side of the base where the instruction can be kept.
- Never leave your child unattended in the car.
- Do not use a child safety seat if the vehicle seat is equipped with front airbags. This can be dangerous. This does not apply to so-called side airbags.
- Before use our product, please read the instruction manual carefully, the product is a safety product and is only safe when used in accordance with the instruction manual.
- The product must only be used on a forward facing seat that is fitted with the ISOFIX and Top Tether anchoring systems or 3-point belt which is approved according to ECE R16 or an equivalent standard.
- The product may be used on either the front or the back seat. However, we recommend that it is fitted on the back seat.
- After an accident the seat may become unsafe due to damage that is not be noticeable immediately. It should therefore be replaced.
- The safety of the seat can only be guaranteed by the manufacturer if it issued by the original owner.
- We advise you strongly that not to use a second-hand product, because you are not sure what has happened to it.
- The harness pads are important for the safety of your child, therefore use them at all the time.
- Ensure that all luggage and objects likely to cause injury in the event of an accident are properly secured.

2. Important Safety Information






WARNING

- It is recommended that the car seat should not be used more than 5 years from the date of production. The properties of the products may deteriorate due to, for example, ageing of the plastic and this may not be visible.
- The moving parts of the car seat should not be lubricated in any way.
- The baby car seat must not be used without the cover. Please use an original cover, as the cover contributes to the safety of the seat.
- The seat must be secured with a seat belt or ISOFIX and Top tether, even when it not on use. An unsecured seat may injure other passengers in the car in an urgent stop.
- The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- Ensure that the seat is not damaged by the webbing between or underneath heavy luggage, adjustable seats or slamming the car door etc.
- No alterations may be made to the product as this could affect part or the overall safety of the seat.
- In hot weather the plastic and metal parts of the product will be hot. You should cover the seat when the car parked under the sun.
- In order to prevent damage to the cover, do not remove the product's logo.
- Use the seat even in a short journey, as this is when most accidents occur.
- Before the purchase, please check that the seat is properly in your car.
- Take a short break in long journey. So that your child has some time for the relaxation.
- Set a good example yourself and always wear your seat belt.
- Tell your child that he/she should be never play with the harness buckle.
- **REMARK:** Your car seat can be fixed safely on almost seats of the cars. However, on some seats the belts are fixed so that proper installation is not possible, in that case, try another seat.

3. How to Use the Product

3.1 Use in the vehicle

You can use your child car seat as follows:

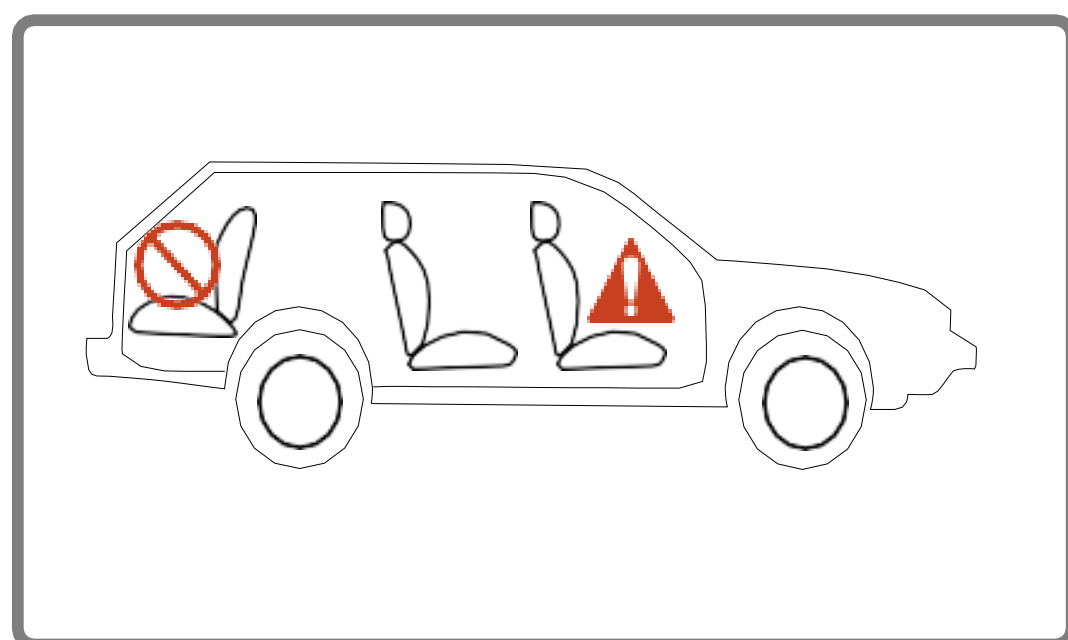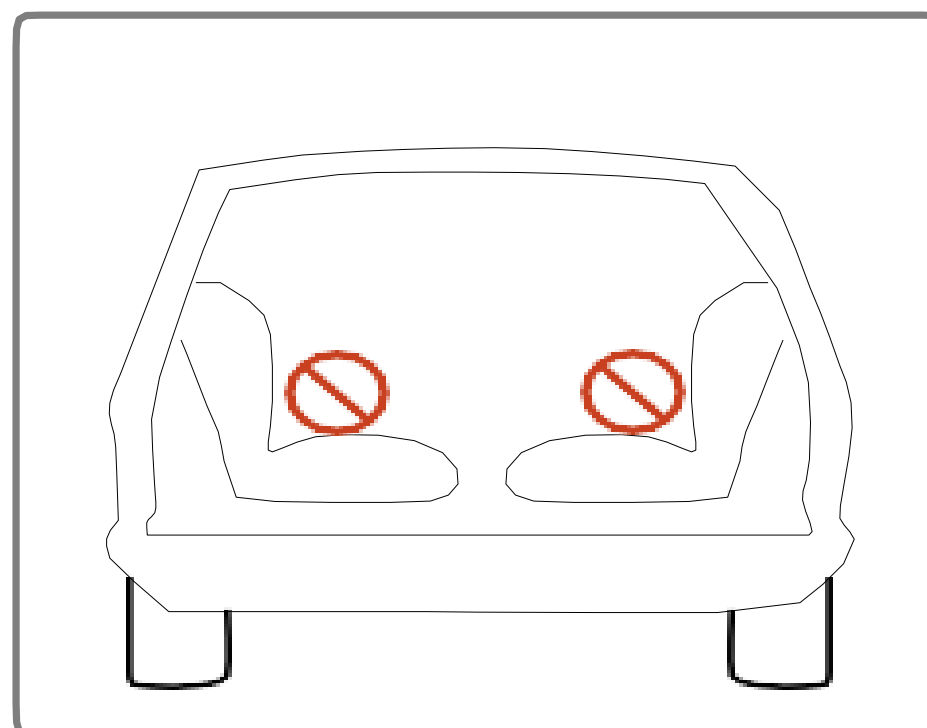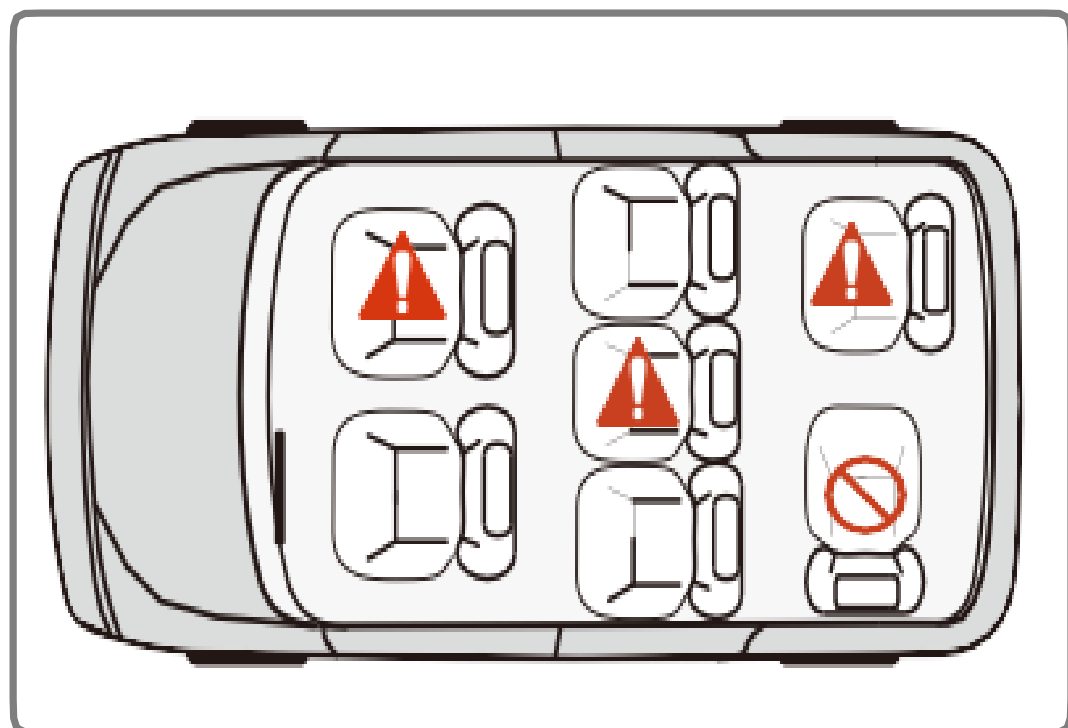

**DO NOT use with 2-point belt.
Please install with the 3-point belt.**

Please observe the regulations applicable to your particular country. The safety belt must be approved to ECE R 16 or a comparable standard.

Do not use with 2-point belt.

Can be used if the vehicle seat is equipped with a 3-point belt.



3. How to Use the Product

3.1 Use in the vehicle

▪ In the direction of travel	Yes
▪ Against the direction of travel	No
▪ With 2-point belt	No
The use of a 2-point belt substantially increases the risk of injury to your child in the event of an accident.	
▪ With 3-point belt	Yes
The safety belt must be approved to ECE R16 or a comparable standard (see test label on belt with an "E" or "e" in a circle).	
▪ with the ISOFIX and Top Tether anchoring systems	Yes (1)
(1) If there is a front airbag: Slide the passenger seat a long way back and refer to any instructions in vehicle owner's manual.	
▪ On front passenger seat	Yes (2)
(2) Do not use on passenger seats with a front airbag! The front passenger seat may be used with or without ISOFIX, with the same notes as currently given for the ISOFIX (slide the seat back and refer to vehicle instructions).	
▪ On outer rear seat	Yes
▪ On centre rear seat	Yes (3)
(3) Can be used if the vehicle seat is equipped with 3-point belt	

(Please observe the regulations applicable to your particular country).

3. How to Use the Product

3.2 Securing your baby using the baby insert



For the protection of your baby

Please use the baby insert attached to this car seat when your baby's weight is less than 15kg.

The baby insert is used to provide extra comfort for very small babies, and it gives your baby the necessary support while he or she is still small.



Baby insert

- Always secure your baby in the car seat using the harness.
- Never leave your baby unattended in the car seat when placing it on elevated surfaces (e.g. a table, nappy changing unit, etc.).
- Never allow the strap end to become caught in moving parts (e.g. automatic doors, escalators, etc.).
- **Caution! The plastic parts of the car seat heat up in the sun, so that your baby may get burnt. Protect your baby and the car seat against intensive solar radiation (e.g. by putting a light cloth over the seat).**
- Take your baby out of the car seat as often as possible to relieve its spine.
- We recommend frequent breaks during long journeys. Even outside of the car, please avoid leaving your baby in the car seat for too long.

3. How to Use the Product

3.3 How to adjust the belts, headrest and seat positions


IMPORTANT! The correct belt height of the shoulder belts is attained when the belt disappears into the shell slightly above the shoulder of the child.

Make sure that the shoulder belts fit properly over the shoulders of the child.

3.2.1 Adjusting the belts

Loosen the harness straps by pressing the release button and pulling the harness straps as far as you can.


Note! Do not pull the shoulder pads.

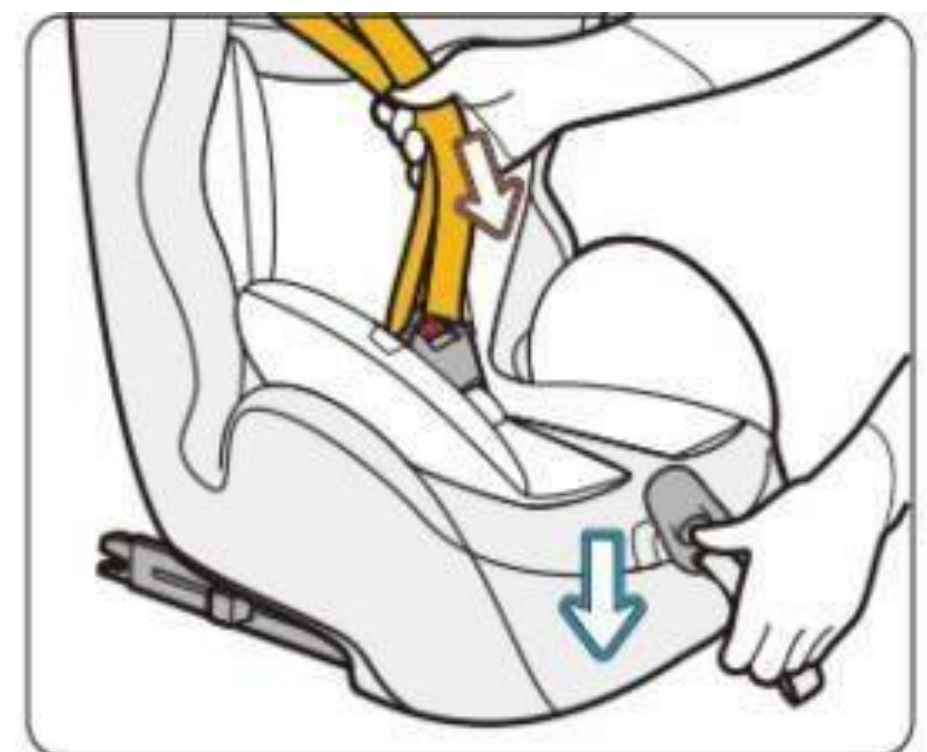

3.2-2 Different heights of the headrest

The headrest can be set at 8 different heights.





Press the button on the headrest hand i.e. on the top of the seat. It is important to make sure the headrest fit properly to head.

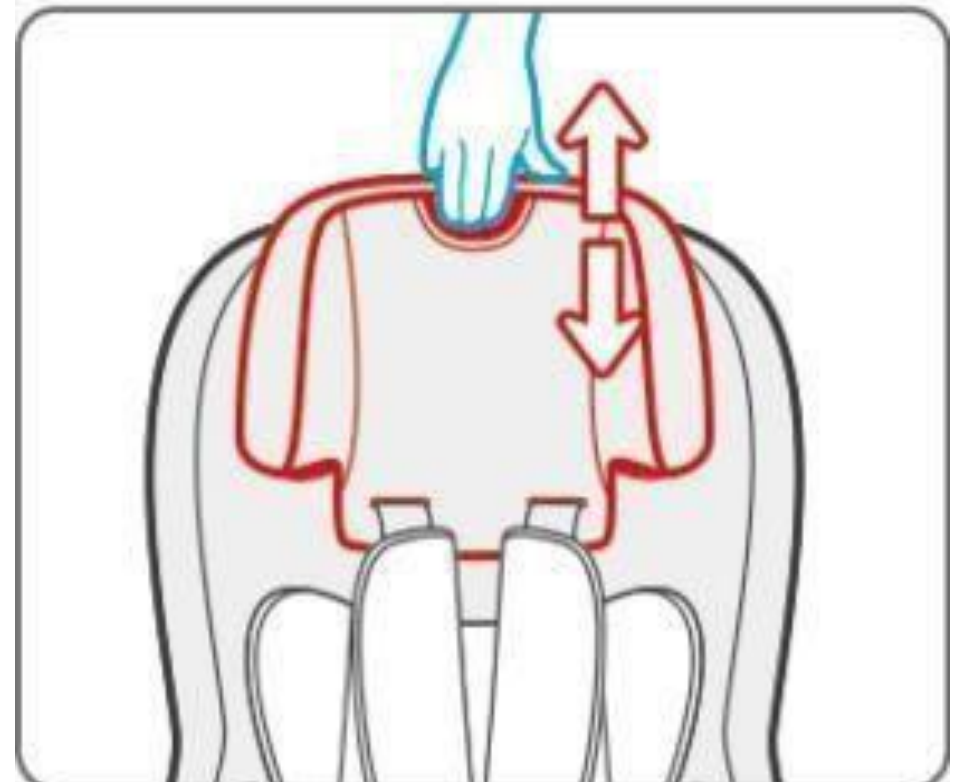

3. How to Use the Product

3.4 Securing your baby using the harness

- Loosen the harness straps by pressing the release button and pulling the harness straps as far as you can.
- **Note! Do not pull the shoulder pads.**
- Open the harness buckle, then place the harness straps to the sides of the car seat.
- Put the baby into the car seat.
- The correct belt height of the shoulder pads is attained when the strap disappears into the shell slightly above the shoulder of the child. Make sure that the harness straps fit properly over the shoulders of the child.
- Slide buckle tongues together and insert them in the buckle with an audible sound “click”.
- Pull the straps tight by the harness adjustment strap, and make sure the tightness is comfortable to your kid

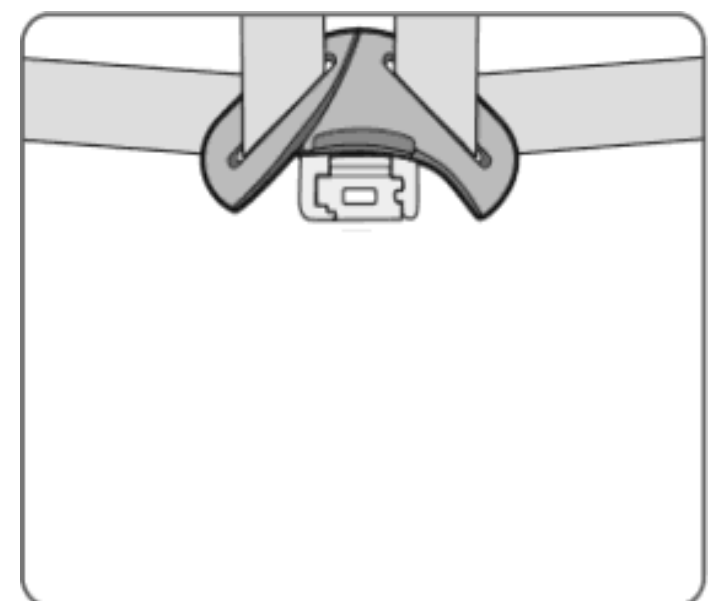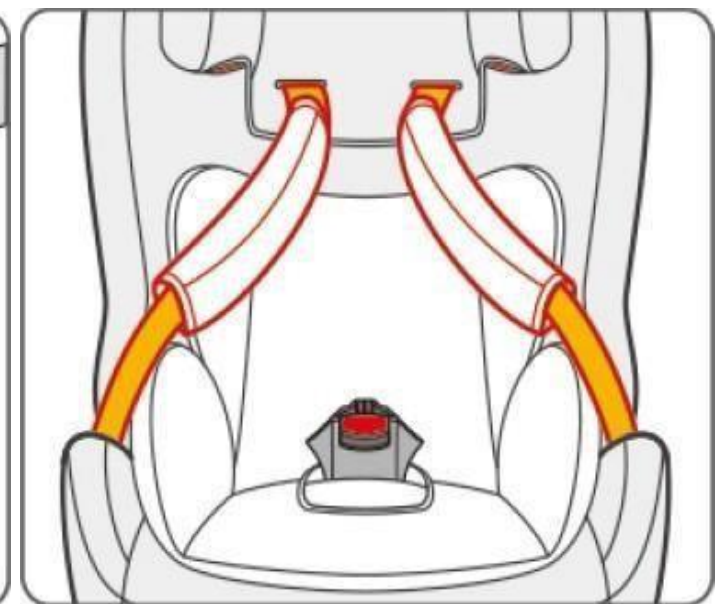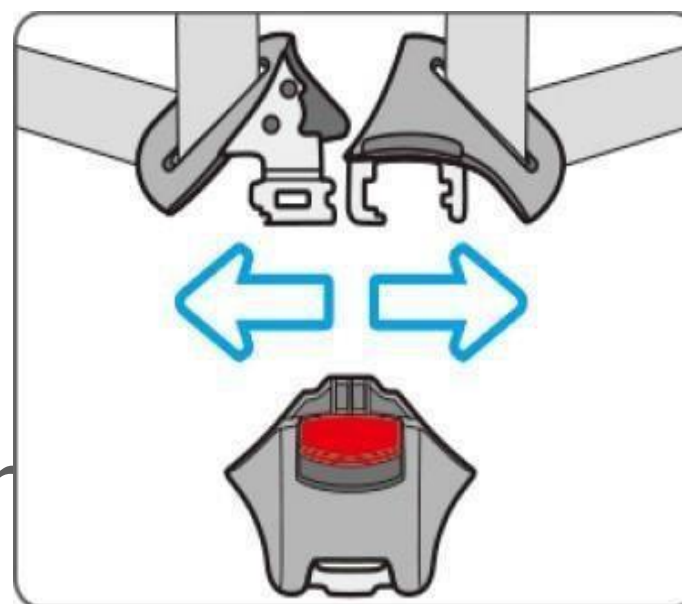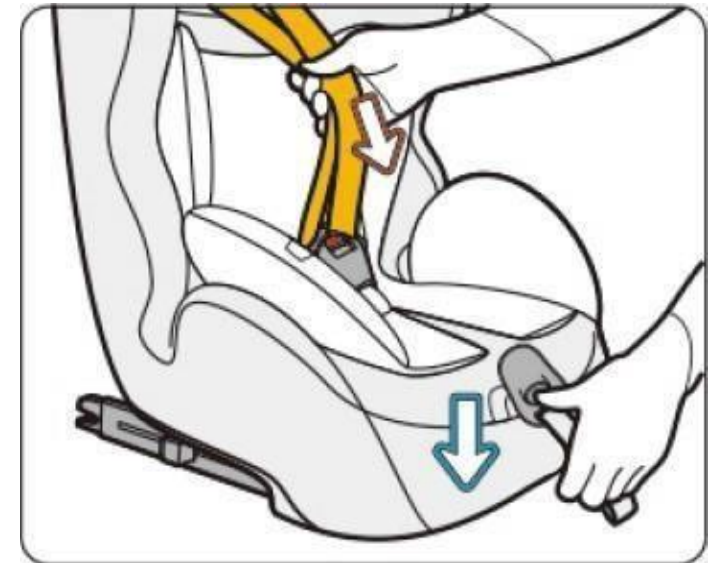

CAUTION!

Do not twist or interchange the harness straps.


3. How to Use the Product

3.5 Tightening the harness

- Pull the straps end straight towards you, not upwards or downwards.
- Please pay attention to the strap end. Whilst traveling (especially outside the car) it should always be attached to the cover.



3.6 Checklist to ensure that your baby is buckle up correctly.

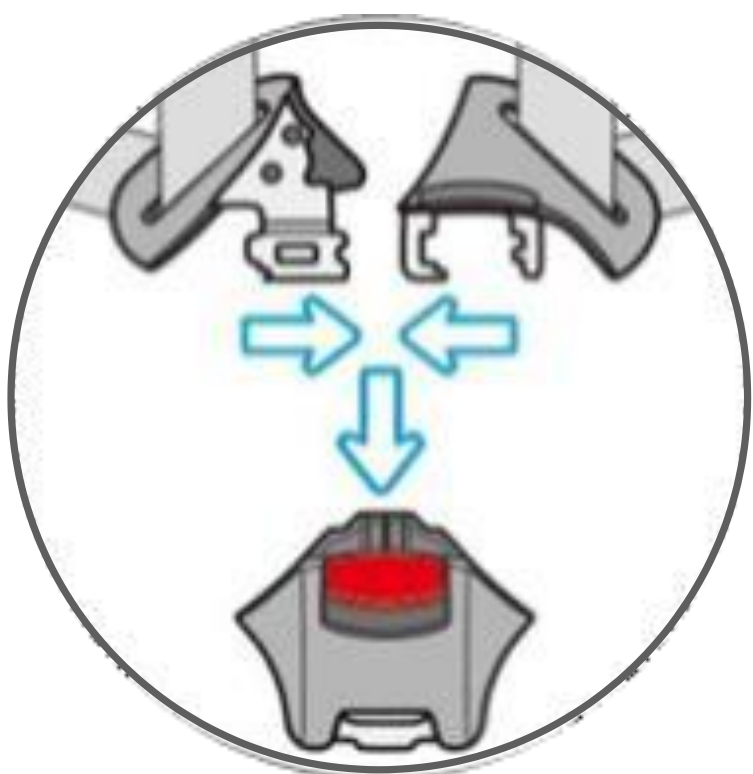

- For the safety of your baby , please check that...
- The harness straps of the car seat are comfortable but firm fit around your child.
- The harness straps are adjusted correctly.
- The harness straps are not twisted.
- The buckle tongues are engaged in the harness buckle.

4. INSTALLATION



Please do not leave your child unattended in the child safety seat in the vehicle.

In the case of an emergency stop or an accident unsecured persons or objects may cause injury to other vehicle occupants. Please always check that:

- The backrests of the vehicle seats are locked (i.e. that a foldable rear seat bench latch is engaged).
- All heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured.
- All persons in the vehicle have their seat belts fastened.
- The child safety seat is always secured when it is in the vehicle, even if no child is being transported.

To protect your vehicle

Some vehicle seat covers of sensitive materials (e.g. velour, leather, etc.) may develop wear marks when child seats are used. This can be avoided by placing a blanket or towel under the child seat.

4. INSTALLATION


4.1 Forward Facing Car Seat Installation for children between 76cm and 105cm tall using ISOFIX system and the Top-Tether

WARNING! The maximum occupant mass is 24KG.


First, please check if there are two ISOFIX anchorages in the perpendicular intersection of the vehicle seat back and seat cushion, and the user-ready tether anchorage behind the vehicle seat.

Tips: The user-ready tether anchorage usually permanently installed on the inner rear luggage shelf or on the vehicle floor. Details you could read your vehicle guidelines or contact the vehicle manufacturer.


Press the ISOFIX release button and push the ISOFIX connectors forward as far as possible.

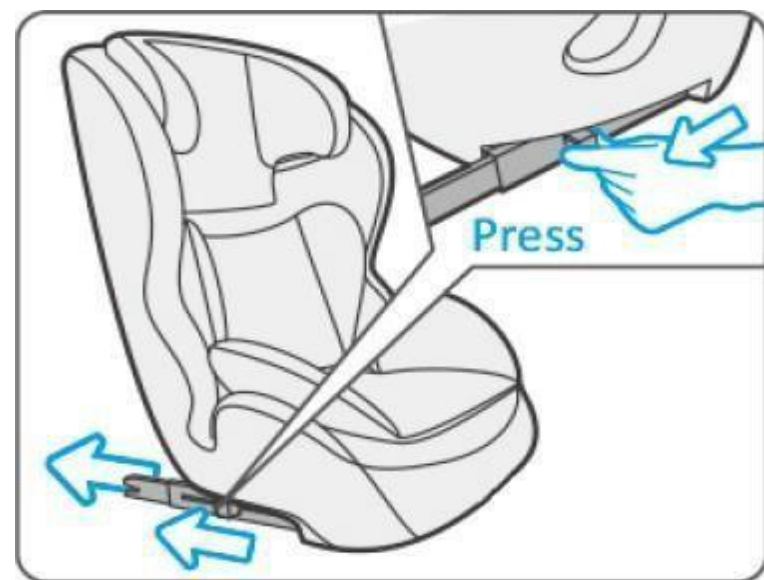

Push the ISOFIX connectors directly into the anchorages until heard an audible sound "click".

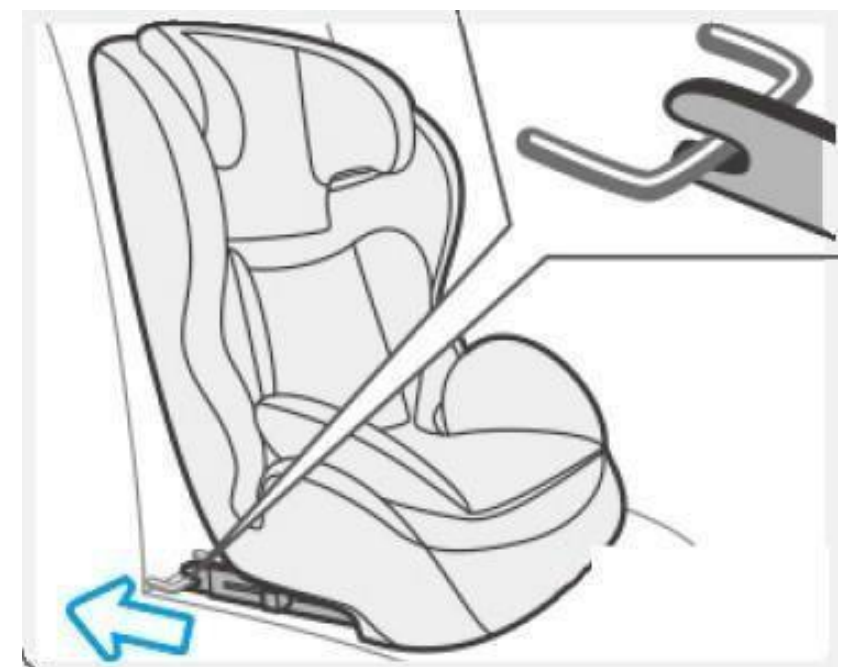


Grasp the seat body to check the seat if it is fastened tightly or shakes. If the seat shakes and the ISO FIX connectors are pulled out, please repeat the above steps and install it again.


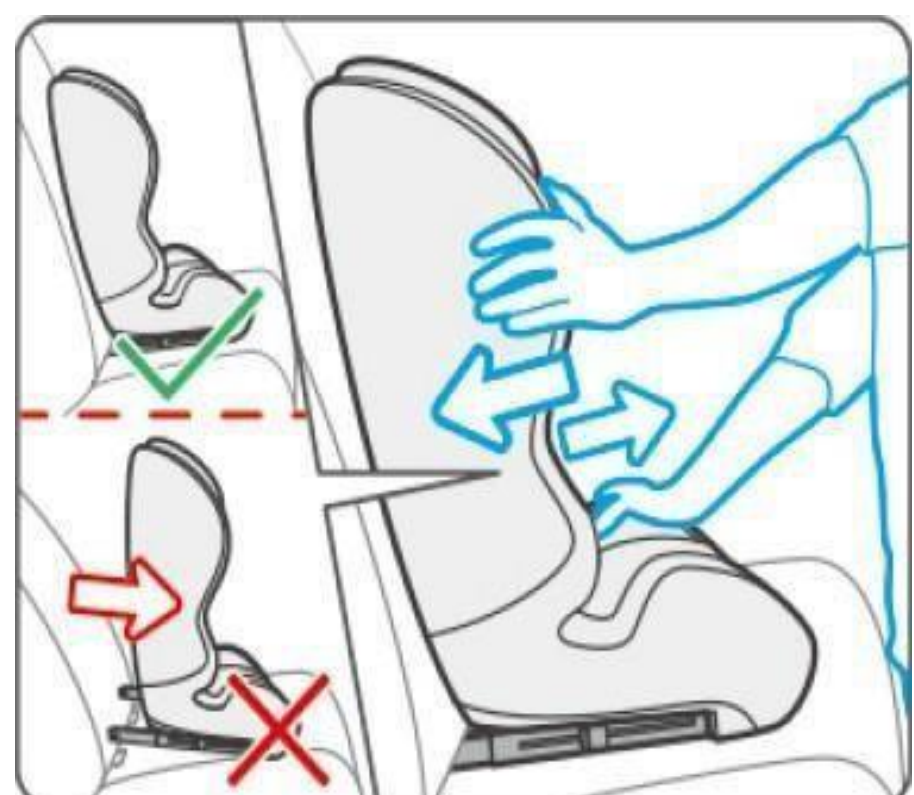


4. INSTALLATION


4.1 Forward Facing Car Seat Installation for children between 76cm and 105cm tall

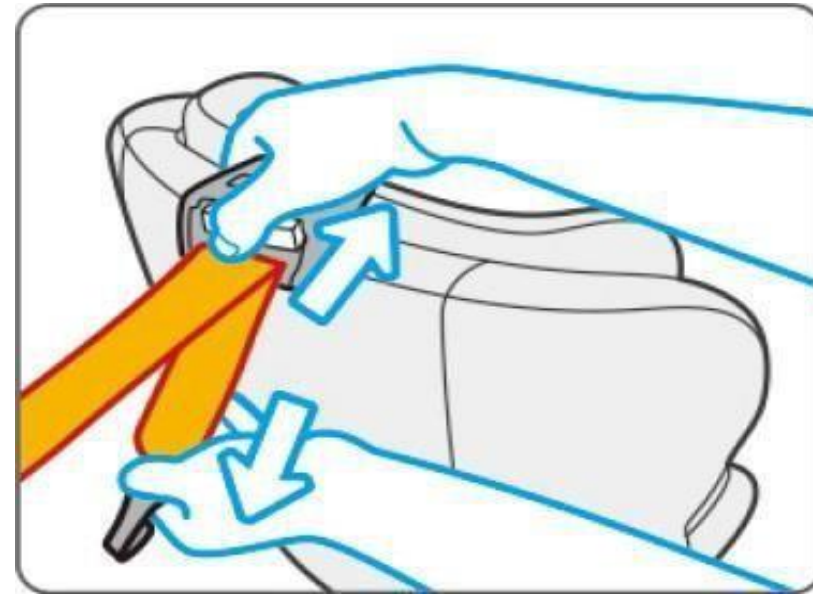

Pull out the top tether and press the tether strap release button to extend the strap until it is long enough to hook the user-ready tether anchorage behind.

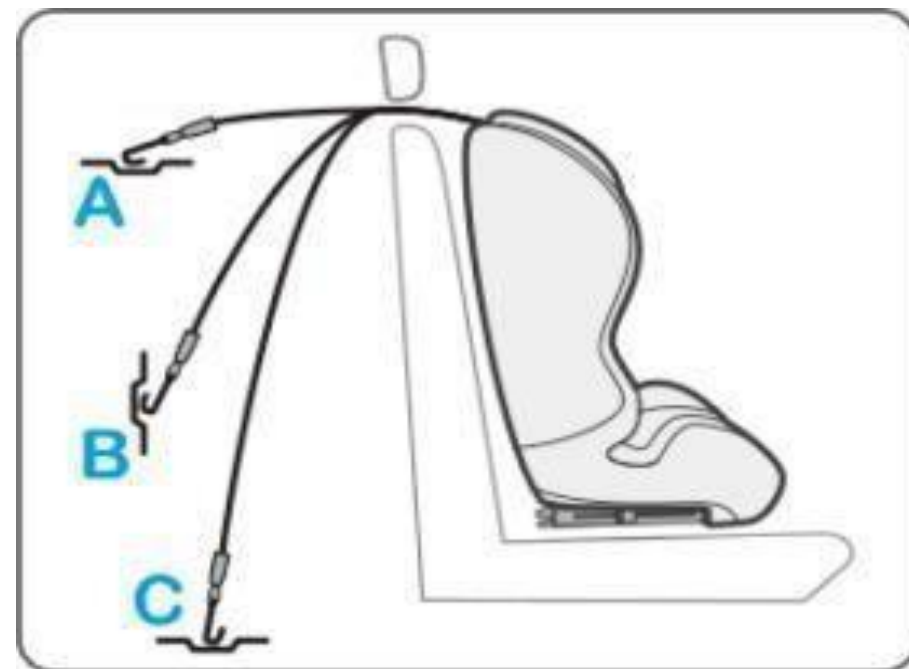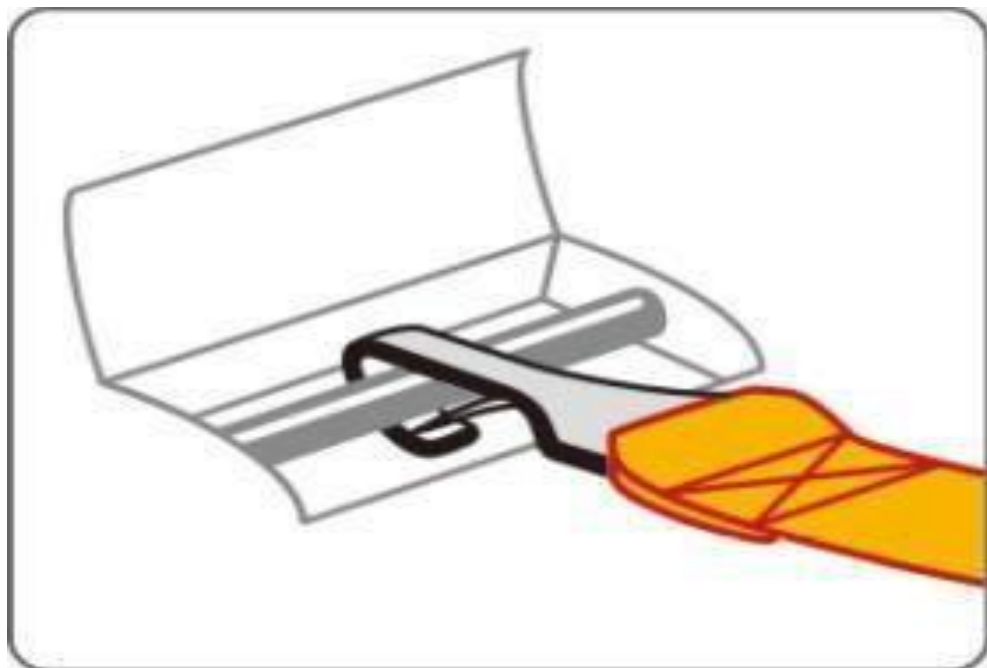

Hook the tether strap hook onto the user-ready anchorages. Check there maybe are 3 anchorages for the hook, please find one in your favor.

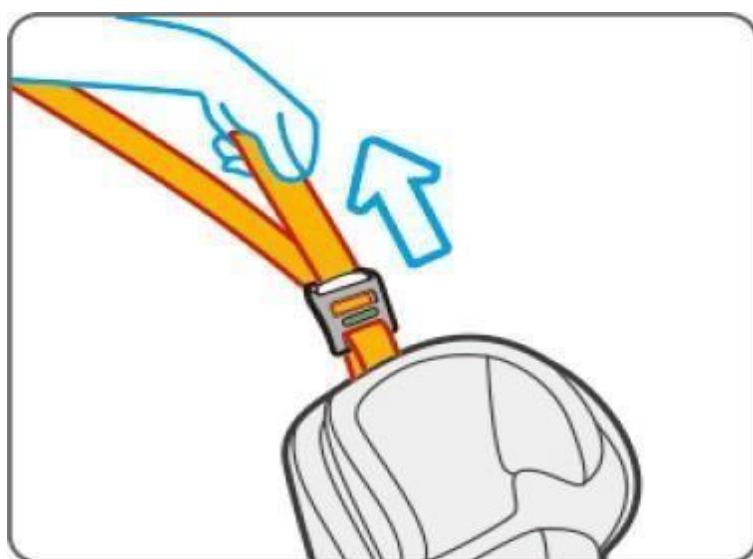


Pull the tether strap on another end back to tighten the top tether.

CAUTION!




If the top tether is tightened favorably and correctly, a green mark will turn up on the other end of the strap release button, please do check it.

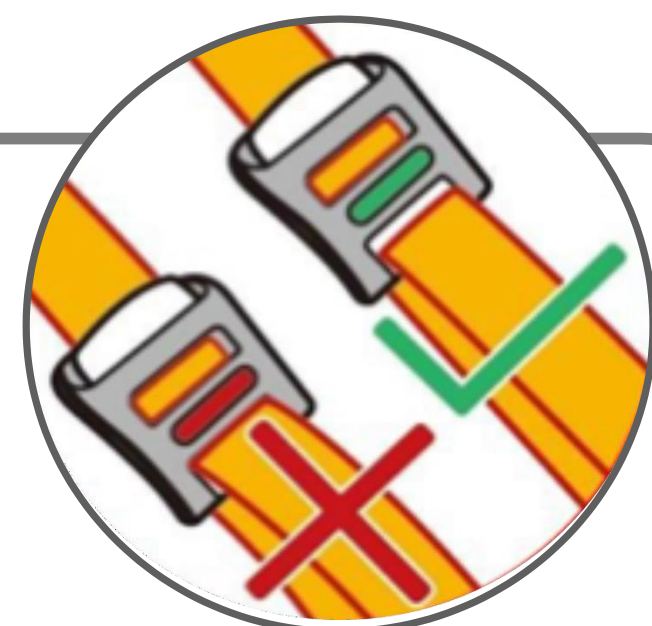

4. INSTALLATION



4.2 Forward Facing Car Seat Installation for children between 100cm and 150cm tall using a three-point car seat belt

- Before the installation, please take away the Harness system of baby car seat.
- Note: The Baby insert, Harness strap, Harness buckle, Buckle pads & Shoulder pads should be stored away safely for future use (see **5.1** Removing the 5-point harness system and cover).

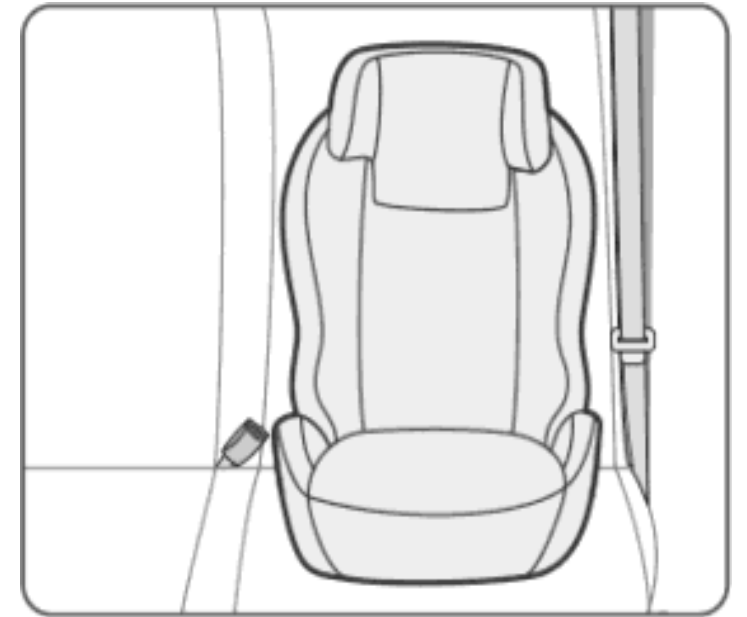


WARNING!

Do not to use any load bearing contact points other than those described in the instructions and marked in the child restraint. The belt must be routed as shown in the instructions.

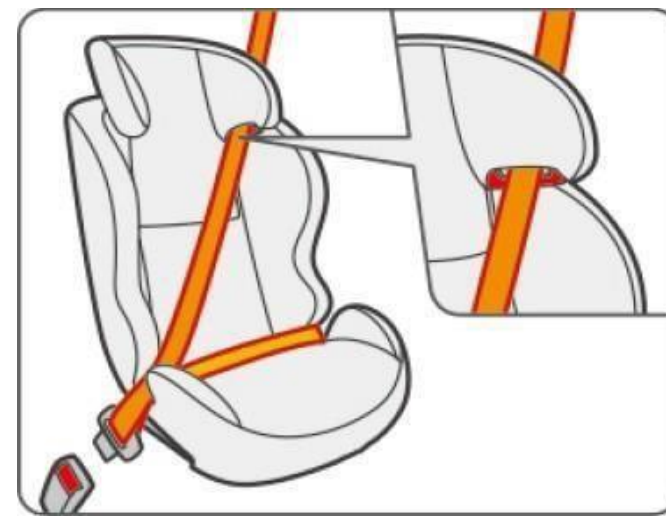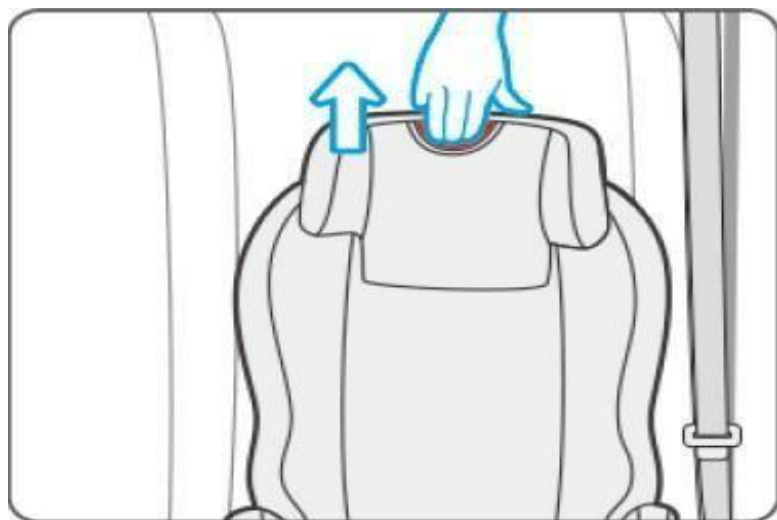

- Adjust the height of the headrest to suit your child.
- Put the shoulder belt through the shoulder belt guide under the headrest.
- Place your child into the car seat and pass the belts through the bottom of the arm rest. Fasten the car belt with an audible sound "click".

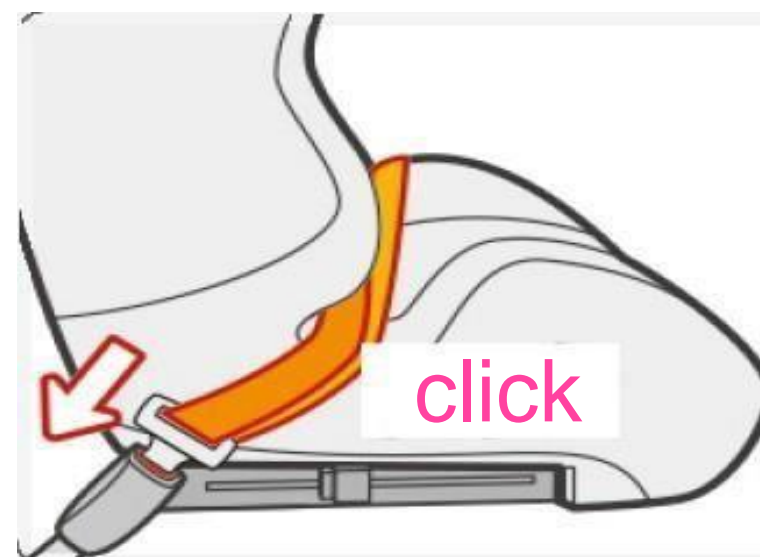

- Make sure the Lap belt is stretched as low as possible over the child's hips, within the Belt guides, and fastened into the buckle. The Shoulder belt must cross midway between child's shoulder and neck.

5. CARE INSTRUCTION

5.1 Removing the 5-point harness system and cover

- Pull the zipper at the bottom of seat back up, then raise the cover as shown in the picture.




- Press the adjustment device and pull the harness strap out off the strap yoke to un lock it.




- Pull the shoulder strap axle out from the gap of the shell. Then untie the shoulder strap and pull it out from the harness slots.



- Loosen the cover of seat base and push the strap clip through the strap clip slot.
- Then, take covers around both holders out along the edge of holders as shown in picture.

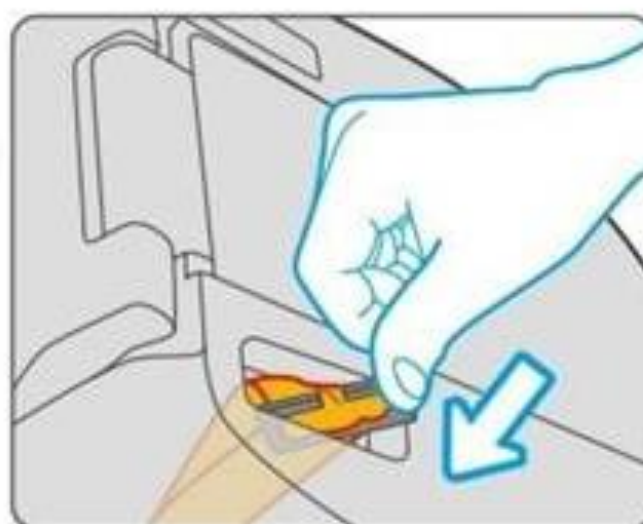


- After the above steps, pull the cover around adjusting device down, and take the cover out from the edge of adjusting device, then remove the 5-point harness system, head rest cover and shell cover.

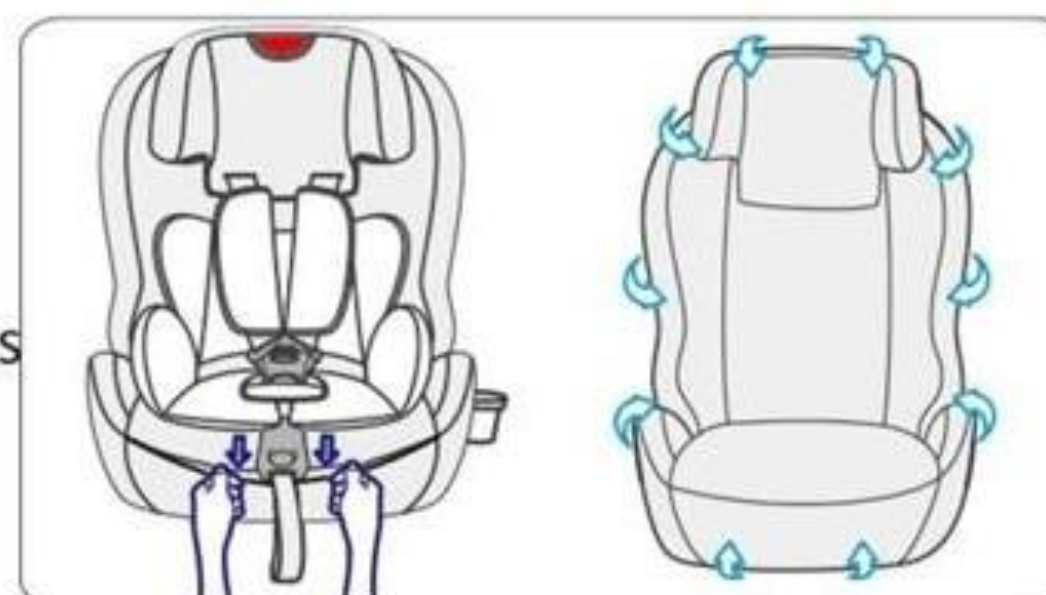



5. CARE INSTRUCTION

5.2 Refitting the 5-point harness system and cover



- After washing, place the cover on the shell, pull the cover around adjusting device down and insert the cover around the edge of adjusting device.

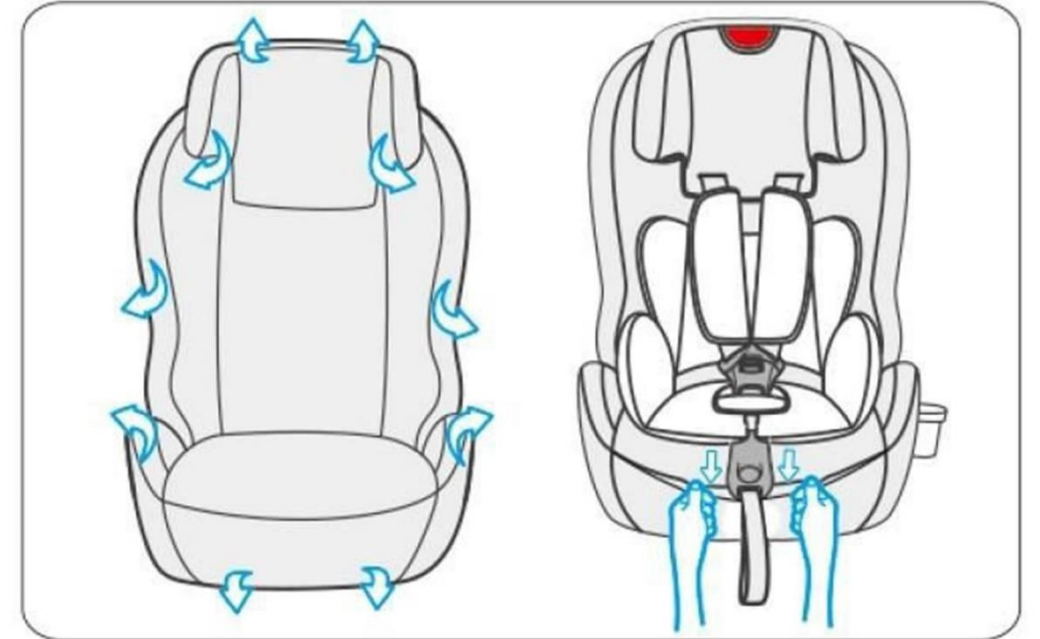

- Pass the strap clip through the strap clip slot.
- Then, pull both sides of covers as shown in picture and cover both sides of holders.

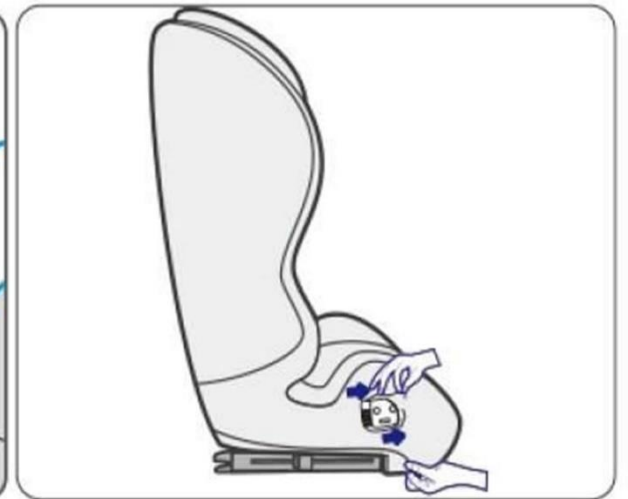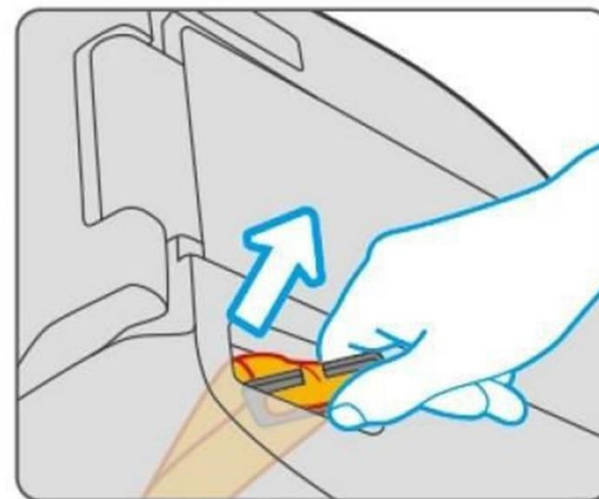

- Pass the end of the shoulder strap through the harness slot, fix into shoulder strap axle, and lock the shoulder strap axle to the seat shell .

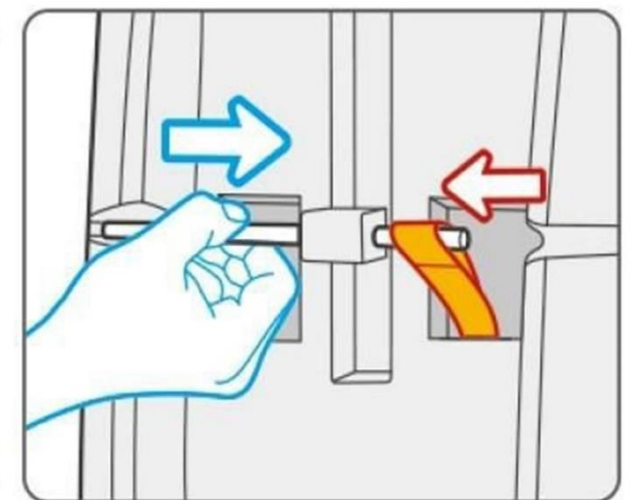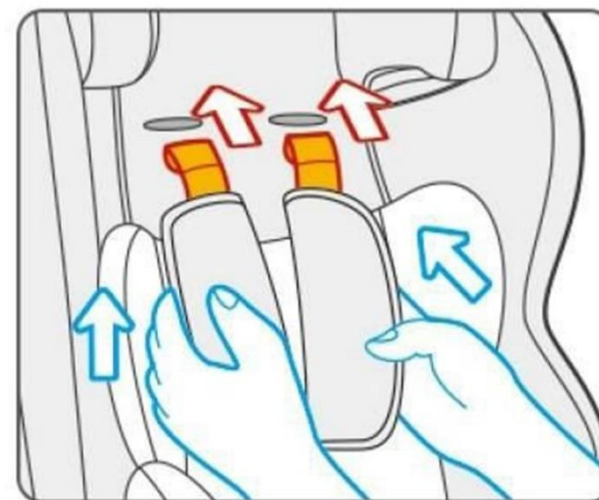

- Also put the end of the harness strap through the harness strap slot and shell, fix into the strap yoke. Make sure the seat straps can not be rotated.



- Close the buckle, then fasten the cover all around. Close the snap buttons on the back. Check that it works!



5. CARE INSTRUCTION

4.1 Cleaning

Please be sure to use only original seat covers, as the seat cover is important to the proper functioning of the system.



The child seat must not be used without the seat cover.

- The cover can be removed and washed with a mild detergent using the washing machine's cycle for delicate items (30°C). Please observe the instructions on the washing label of the cover. The colours of the cover may fade if washed at more than 30°C. Do not spin, and never tumble dry in an electric clothes dryer (the fabric may separate from the padding).
- The plastic parts can be cleaned using soapy water. Do not use harsh cleaning agents (such as solvents).
- The harness can be removed and washed in lukewarm soapy water.
- **Caution! Never remove the buckle tongues from the straps.**

Checklist

For safety's sake read through this checklist before you set off.
Check that the harness belt system fits properly and tightly around your child and that the shoulder belts are at the correct height.
Check regularly that the belt in the baby car seat is not damaged. If it is damaged do not use your product in any circumstances.
Check that you have secured your baby car seat with the seat belt.

6. Environmentally friendly disposal

Warning Danger of suffocation! Packaging material is dangerous for children. Never let children play with packaging material.

6.1 Disposal and packaging

The packaging of your unit consists of materials that are necessary to guarantee effective protection during transport. These materials are fully recyclable and therefore reduce the environmental impact. Dispose of the packaging in a bin for recyclable materials.

6.2 Disposal of old equipment

Old appliances must be disposed of in accordance with the guidelines and regulations of the local waste disposal authority. Check with your local administration for the address of the nearest recycling center and deliver your appliance there.

The real design of the products may differ from the pictures presented. All the pictures in this user guide are for reference only.

The product has been tested and meets all the requirements of the ECE R129 /03.





Office address:
Fablekids
Gneisenaustraße 10-11
D-97074 Würzburg

Return address can be found in the imprint: <https://www.fable-kids.com>

VAT identification number: DE 263752326
Court of the Commercial Register is Würzburg, HRB 10082
WEEE Reg.-No. DE 61617071



Office address: FableKids • Gneisenaustraße 10-11 •
97074 Würzburg



Our customer service number:
Tel. +44 (0) 208 068 5604



E-Mail: info@fable-kids.com

